

OPERATION & MAINTENANCE

Technocover UltraSecure Level 3 Access Gates

Technocover UltraSecure access gates and frames are manufactured in a minimum 3 mm steel plate and hot dip galvanised after manufacture to BS EN ISO 1461, a standard which determines that a product has a guaranteed minimum life expectancy.

Operation

To open the gate...

Unlock and remove the primary gate security padlock. Pull the gate outwards to the fully open position and ensure that the safety stay (where fitted) is properly engaged.

Undo the shootbolts to the passive leaf (where fitted) and push the gate fully open. Ensure that the safety stay (where fitted) is properly engaged.

To close the gate...

Disengage the passive leaf safety stay (where fitted) and pull the gate into the closed position. Lock, using the shoot bolts provided.

Disengage the primary gate safety stay (where fitted) and push the gate closed Re-fit the Security padlock.

Maintenance

The gate is totally maintenance free after installation, but extreme substances, such as acids, should not be brought into contact with the gate, as they may adversely affect the life expectancy of the galvanising.

Annual inspection is, however, recommended to ensure that the free movement of hinges and effectiveness of safety stays (where fitted) are maintained.

Replacement components may be obtained from Technocover.

For care and maintenance of padlocks, take manufacturers advice.

(Ref. Document title: SCD-DV-3-O&M, Rev: A, Date: May 2015)